


Rowenta

ULTRA STEAM

HANDHELD FABRIC STEAMER



www.rowentausa.com

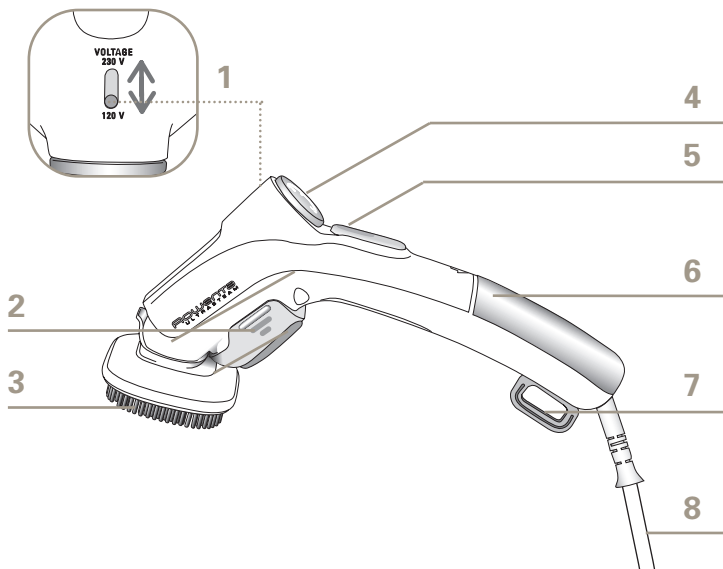

DESCRIPTION

- | | |
|-----------------------------------|--------------------------------------|
| 1. Voltage selector
(120/230V) | 5. Steam indicator / Steam
button |
| 2. Lint pad | 6. Removable water tank |
| 3. Fabric brush | 7. Storage hook |
| 4. Steam control dial | 8. Electrical cord |

IMPORTANT SAFETY INSTRUCTIONS

When using your appliance, basic precautions should always be followed, including the following:

Read all instructions before using this product.

- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating.
- Use appliance for its intended use only.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.

- Do not direct steam at people or animals, or use steamer on garment while they are being worn.
- Never yank the cord to disconnect from outlet, instead grasp plug and pull to disconnect.
- Always disconnect appliance from electrical outlet when filling with water, emptying or when not in use.
- Do not operate appliance with a damaged cord or if appliance has been dropped or damaged.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance. Ship it to the nearest authorized Rowenta approved service center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the appliance is used.
- This appliance is not intended for use by children and other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely.
- Children should be supervised by the responsible person to ensure that they do not play with the appliance.
- Do not leave appliance unattended while plugged in or while it is still hot.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you empty a steam appliance, there may be hot water in the reservoir.
- The use of accessory attachments other than those provided by Rowenta is not recommended and may result in fire, electric shock or personal injury.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate a high wattage appliance on the same circuit.
 - If an extension cord is absolutely necessary, a 15 amp cord should be used. Cords rated for less amps may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- For dual voltage appliance:
- Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage operation contained in the instruction section of this manual.
 - This appliance was set at the factory to operate at 120 Volts. Refer to operating instructions section of this manual for conversion to 230 volts operation.
 - Incorrect setting of voltage can result in damage of the appliance.
 - Your Rowenta appliance is intended for household use only.

SAVE THESE INSTRUCTIONS

Before use


Please read the instructions for use and **Important Safeguards** carefully.



- Remove any packaging from the appliance.
- Do not plug in or turn on until assembly is complete.
- Set the voltage to the correct position.
- Remove the lint pad by pulling it to the bottom.

Dual voltage (depending on model)

The appliance can work on both, 120V or 230V, AC systems. Be sure the dual voltage selector is in the correct voltage position before plugging in. To do this, switch the selector which is above the handle to the right position.

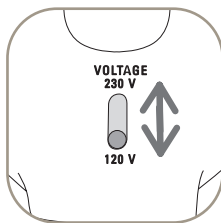

This is a 120V dual voltage appliance and may be used in the United States and abroad without an electrical converter. An adapter plug may be necessary when using appliance in foreign countries. If needed, plug the steambrush into correct adapter plug for the specific country and plug assembly into electrical outlet.


Warning! Never switch selector while unit is plugged in.

Filling with water

- Your steam brush has been designed to operate using untreated tap water. If your water is very hard (check with your local water authority) it is possible to mix tap water with distilled water in the following proportions :
 - 50% untreated tap water,
 - 50% distilled or demineralised water
 - or just use bottled spring water.

Warning ! Never use 100%, distilled or demineralised water as this can cause the appliance to spit and leak.

- Remove the water tank by pushing it backwards.
- Put the tank into the handle until it snaps in.
- Unplug the rubber stopper.
- Fill the watertank to the top with water and close it securely.
- Put the tank into the handle until it snaps in.

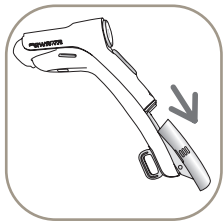


Important: Heat concentrates the elements contained in water during evaporation. The types of water listed below may contain organic waste, mineral or chemical elements that can cause spitting, brown staining, or premature wear of the appliance: water from clothes dryers, scented or softened water, water from refrigerators, batteries, air conditioners, rain water, boiled, filtered or bottled water. Also use distilled or demineralised water only as advised above.

- Completely unwind the power cord. Plug in your steam brush.

Use

It is normal for a small amount of smoke or steam to be produced the first time the appliance is used. This will quickly disappear.

- Once the appliance is plugged in, the light will turn on. Set the steam control dial to the desired setting.
- After approximately 30 seconds, the light will turn off indicating the steambrush, has reached working temperature.

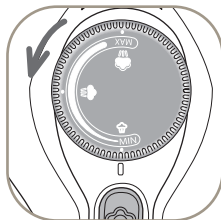

• To begin steaming, press the steam button with the steamer head facing away from you, in vertical position.

Be sure to remove lint pad when steaming as excessive water or steam can cause lint pad color to run.



During use or while unit is heating or cooling, do not rest appliance on its head. Place product on its side on a firm, heat resistant, flat surface, as the head will be hot. As the appliance heats, the housing becomes warm. This is normal.

Steam setting

Set the brush steam output to the type of fabric to be ironed - see table below.

Type of fabric	Setting steam
Cotton / Linen	max.
Silk / Wool	
Synthetics	min.

Tips: Check the fabric's label for recommendations. We recommend that you test acrylic, nylon or other synthetic fabrics in an inconspicuous area to ensure these fabrics are not damaged by hot steam. Test fabric for color fastness in an unobtrusive part of the garment (inner seam). Do not touch silk or velvet with steam head. Some articles can be steamed better from inside. Heavier fabrics may require repeated steaming. Exercise caution at all times. For very delicate fabrics, you can remove the brush. To avoid damage to clothes, keep a distance of 1,5 inches between the steam head and the fabrics. We recommend that before the first use or after the appliance has been stored for some time to test the burst of steam.

Steaming clothes



The Ultra Steam is equipped with a clothes brush.

- To attach the accessory, line it up with the steam head. It locks into position with an audible click.
- Simply pull on the top of the fabric brush to remove it. You can operate the unit with or without the accessory.

Before removing or attaching the steam brush, unplug your appliance and let it cool down.

- Hang the wrinkled article of clothing on a clothes hanger.
- Pull the clothing tight with one hand.
- Gently press the fabric brush against the clothing and move the steambrush down the fabric. Keep pressing the burst of steam button.



Do not allow steambrush to run dry.

The lint pad must not be used when attached to appliance.

- The combination of steam and fabric brush will gently remove the wrinkles.
- After treatment, let the garment cool down on the hanger before wearing.

Lint pad

Threads, lint and hair can easily be removed with the lint pad by brushing the clothes slowly from left to right.

The pad can be cleaned by brushing in the opposite direction right to left on a scrap of old cloth.

Warning: Never touch the steam head until it cools completely.

- Remove the lint pad from the steam brush by grasping on both sides and pulling downwards. The lint pad should slide right off of the brush, and clamp back on after use.



- For storage, attach the lint pad to the steam brush by lining up the slots of the brush with the slots of the lint pad. Gently push the top of the lint pad into place until it snaps in.

After use

- Unplug the appliance. Empty the water remaining in the tank and leave unit on its side to cool. After the appliance has cooled down, it may be stored in the bag provided (depending on model).

Warning: never forget to unplug your device and empty the tank after your working session. While not in use, you can hang you steambrush by its hook.

TROUBLESHOOTING

Issues	Possible causes	Solutions
There is no steam.	The steamer is not plugged in.	Check that your appliance is correctly plugged in.
	The water level is too low.	Unplug your appliance and refill it.
	The steam button has not been primed.	Press the steam button 4 seconds to begin steaming.
	The appliance is being used for the first time.	When appliance is new, priming of the steam feature may be necessary. Once heated, press the steam button up to 15-20 times to start the steaming process.
	The water tank is not in place.	Be sure that the water tank snaps in when put into place.
The appliance does not heat.	It is not plugged in.	Plug in your appliance.
Water leaks or spits.	The water tank is not in place.	Be sure that the water tank snaps when put into place.
	Your appliance is not hot enough.	Allow your steam brush to heat for approximately 30 seconds before using.
	The dual voltage is not set correctly	Be sure that the dual voltage selector is in correct voltage position before operating. Unplug the appliance and switch the selector to the correct voltage.
There is not enough power or too much.	The dual voltage is not set correctly.	Be sure that the dual voltage selector is in correct voltage position before operating. Unplug the appliance and switch the selector to the correct voltage.

In the interest of improving products, Rowenta reserves the right to change specifications without prior notice.

LIMITED WARRANTY

This Rowenta product is warranted for 1 year from date of purchase against defects in material and workmanship. During this period, any Rowenta product that, upon inspection by Rowenta, is proved defective, will be repaired or replaced, at Rowenta's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product. This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow Rowenta's instructions, use on current or voltage other than that stamped on the product, or alteration or repair not authorized by Rowenta. Repair or disassembly by anyone other than a Rowenta authorized service center will void the warranty.

THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, ARE MADE BY ROWENTA OR ARE AUTHORIZED TO BE MADE WITH RESPECT TO THE PRODUCT.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

If you believe your product is defective, bring the product (or send it, postage prepaid) along with proof of purchase to the nearest authorized Rowenta Service Center (see below). If you send the product, please include a letter explaining the nature of the claimed defect.

CORRESPONDENCE CAN BE SENT TO:

ROWENTA

196 Boston Avenue

Medford, MA 02155, U.S.A.

Tel: (781) 396-0600

www.rowentausa.com

OFFICE LOCATION ONLY. Letters will be accepted at this address and packages without a return authorization number will be refused or forwarded to a service center. To service product see service center information below.

SERVICE CENTER INFORMATION:

If your appliance needs service, ship the product to your nearest regional service center. Be sure to put your name on the outside of the shipping box (no P.O. boxes please), include a brief note describing the issue, and include a copy of the sales receipt if the product is in warranty. If in warranty, Rowenta will repair or replace the product at their discretion. If the product is out of warranty, you will be advised of the cost of repair before any work begins.

Turnpike Appliance
California Electric
3495A Lawson Blvd.
1170G Burnett Ave.
Oceanside, NY 11572
Concord, CA 94520
516-483-5596
925-827-1011

Authorized Appliance

1644 West Ogden Ave.

Downers Grove, IL 60515

630-852-1550

SERVICE CENTER INFORMATION IS SUBJECT TO CHANGE. Please visit our website at www.rowentausa.com or call 781-396-0600 for automated service center information.